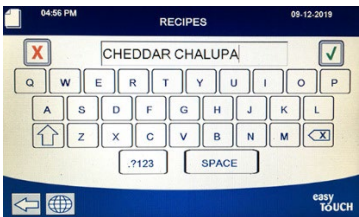
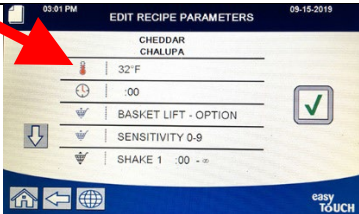


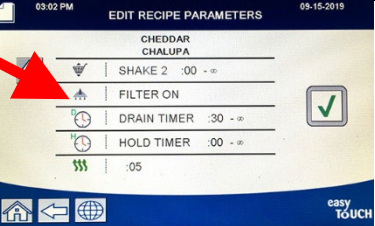
## Instruction Sheet

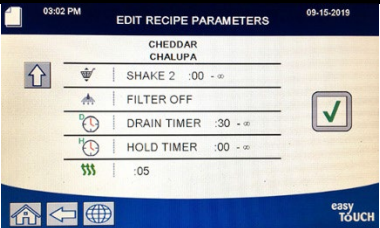
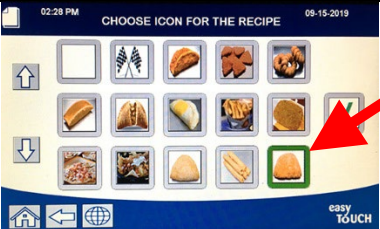
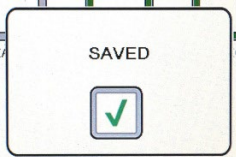
**Subject: Adding Taco Bell Cheddar Chalupa**

**Models affected: Taco Bell FilterQuick Touch Fryers**

Follow these instructions to add Cheddar Chalupa.

| DISPLAY                                                                                                                                                                    | ACTION                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                           | 1. Press the Home button.                                                                                                             |
| <br><b>RECIPES</b><br><b>1 6 5 0</b>                                                      | 2. Press the Recipes button.                                                                                                          |
|                                                                                           | 4. Press the √ (check) button.                                                                                                        |
|                                                                                          | 5. Press the green + button.                                                                                                          |
|                                                                                         | 6. Using the keyboard, enter <b>C H E D D A R</b> .<br>7. Press the space bar.<br>8. Using the keyboard, enter <b>C H A L U P A</b> . |
|                                                                                         | 9. Press the √ (check) button.                                                                                                        |
| <br> | 10. Press the Temperature button.                                                                                                     |

| DISPLAY                                                                                                                                                                    | ACTION                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                           | <p>1. Use the keypad to enter <b>350</b>.</p> <p><b>NOTE: Ensure that the temperature is changed from 32° F (0° C) to 350° F (177° C).</b></p> |
|                                                                                           | <p>2. Press the √ (check) button.</p>                                                                                                          |
|                                                                                           | <p>3. Press the cook time button.</p>                                                                                                          |
|                                                                                           | <p>4. Use the keypad to enter <b>50</b>.</p>                                                                                                   |
|                                                                                           | <p>5. Press the √ (check) button.</p>                                                                                                          |
|                                                                                          | <p>6. Ensure cook time is set to <b>:50</b>.</p>                                                                                               |
|                                                                                         | <p>7. Press the down arrow five (5) times.</p>                                                                                                 |
| <br> | <p>8. Press the Filter button.</p>                                                                                                             |
|                                                                                         | <p>9. Press the OFF button.</p>                                                                                                                |

| DISPLAY                                                                                                                                                                | ACTION                                                   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| <br> | 10. Press the ✓ (check) button.                          |
|                                                                                       | 11. Press the icon to link with this product.            |
|                                                                                       | 12. Press the ✓ (check) button.                          |
|                                                                                      | 13. Press the LUNCH and CHANGE OVER buttons.             |
|                                                                                     | 14. Press the ✓ (check) button.                          |
|                                                                                     | 15. The controller displays SAVED.                       |
|                                                                                     | 16. Press the ✓ (check) button.                          |
|                                                                                     | 17. Press the home button.                               |
| <br><b>CREW MODE</b>                                                                | 18. Press the Crew Mode button to return to main screen. |

| DISPLAY                                                                           | ACTION                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>19. Associate the new programmed product to a button by pressing and holding an existing product button. The outline of the product button changes from green to red and then to solid red. Press the new desired product to assign to the button.</p> |