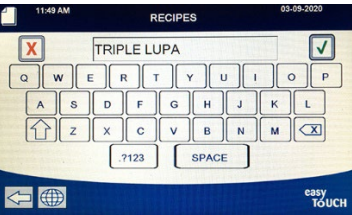
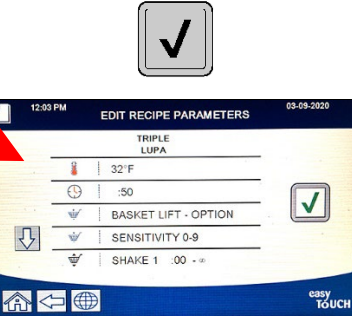
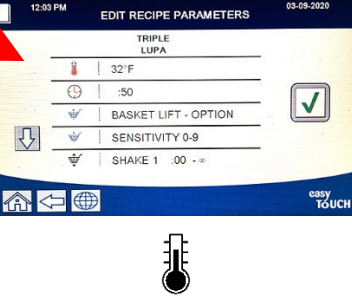


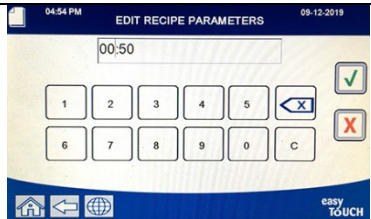
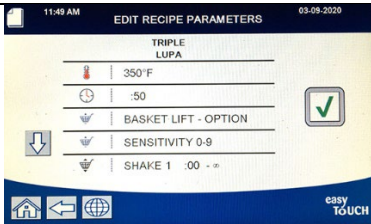
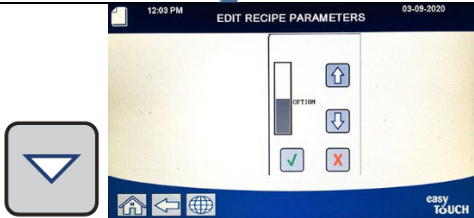
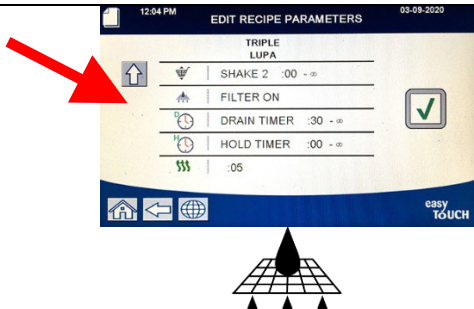
Instruction Sheet

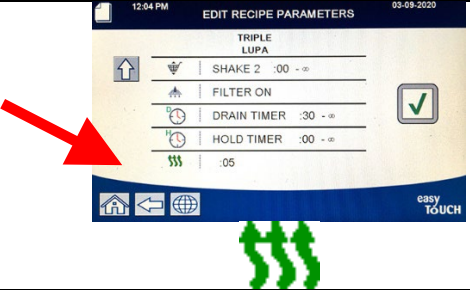
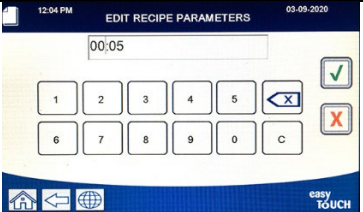
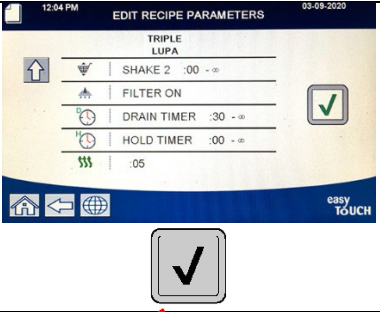
Subject: Adding Triple Lupa

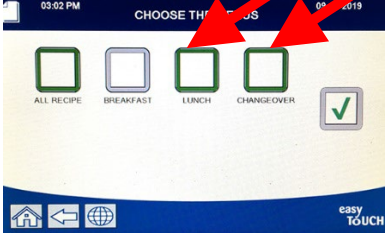
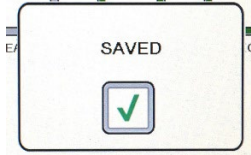
Models affected: Taco Bell FilterQuick Touch Fryers

Follow these instructions to add Triple Lupa.

DISPLAY	ACTION
	1. Press the Home button.
 RECIPES 1 6 5 0	2. Press the Recipes button.
	3. Enter 1 6 5 0
	4. Press the ✓ (check) button.
	5. Press the green + button.
	6. Using the keyboard, enter T R I P L E . 7. Press the space bar. 8. Using the keyboard, enter L U P A .
	9. Press the ✓ (check) button.
	10. Press the Temperature button.

DISPLAY	ACTION
	11. Use the keypad to enter 350 . NOTE: Ensure that the temperature is changed from 32 °F (0 °C) to 350 °F (177 °C).
	12. Press the ✓ (check) button.
	13. Press the cook time button.
	14. Use the keypad to enter 50 .
	15. Press the ✓ (check) button.
	16. Ensure cook time is set to :50 .
	17. Press the Basket Lift button.
	18. Press the down arrow one (1) time. Ensure OPTION is displayed.
	19. Press the ✓ (check) button.
	20. Press the down arrow five (5) times.
	21. Press the Filter button.

DISPLAY	ACTION
	22. Press the OFF button.
	23. Press the Instant On button.
	24. Use the keypad to enter 05.
	25. Press the ✓ (check) button.
	26. Press the ✓ (check) button.
	27. Press the icon to link with this product. If no icon is available press the white box.
	28. Press the ✓ (check) button.

DISPLAY	ACTION
	29. Press the LUNCH and CHANGE-OVER buttons.
	30. Press the √ (check) button.
	31. The controller displays SAVED.
	32. Press the √ (check) button.
	33. Press the home button.
 CREW MODE	34. Press the Crew Mode button to return to main screen.
	35. Associate the new programmed product to a button by pressing and holding an existing product button. The outline of the product button changes from green to red and then to solid red. Press the new desired product to assign to the button.