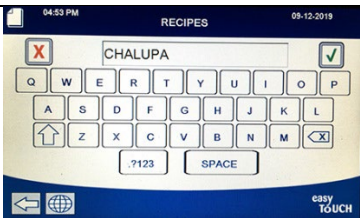
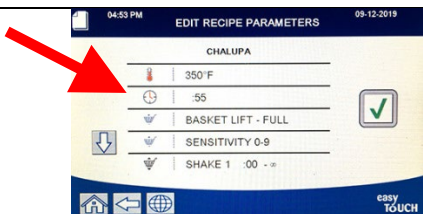


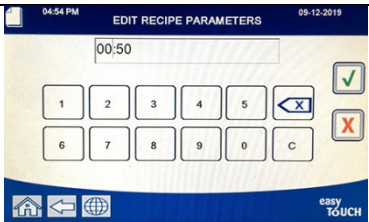
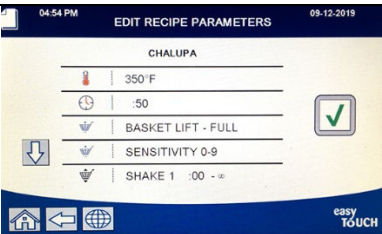
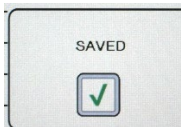
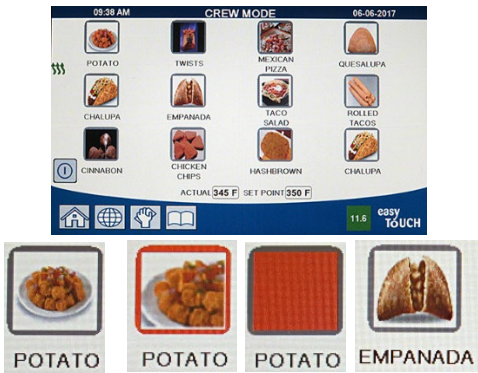
Instruction Sheet

Subject: Edit Taco Bell Chalupa Cook Time

Models affected: Taco Bell FilterQuick Touch Fryers

Follow these instructions to edit Chalupa cook time.

DISPLAY	ACTION
	1. Press the Home button.
 RECIPES 1 6 5 0	2. Press the Recipes button.
	4. Press the √ (check) button.
	5. Press the Chalupa icon. The border should change from gray to green.
	6. Press the pencil icon at the bottom of the screen to edit an existing product.
	7. Chalupa is displayed.
	8. Press the √ (check) button.
	9. Chalupa parameters are displayed.

DISPLAY	ACTION
	10. Press the cook time button.
	11. Use the keypad to enter 5 0 .
	12. Press the √ (check) button.
	13. Ensure cook time is set to :50 .
	14. Press the back-arrow button.
	15. The controller displays SAVED.
	16. Press the √ (check) button.
	17. Press the home button.
 CREW MODE	18. Press the Crew Mode button to return to main screen.
	19. Associate the new programmed product to a button by pressing and holding an existing product button. The outline of the product button changes from green to red and then to solid red. Press the new desired product to assign to the button.